

HP-985B
Non-contact infrared thermometer
Instruction manual

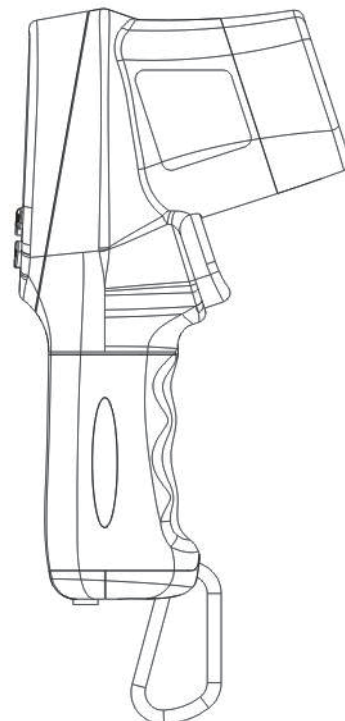 



TABLE OF CONTENTS

1. Introduction.....1/3

2. Quick start instruction.....3/5


3. Maintenance.....6

 4. Specifications.....6

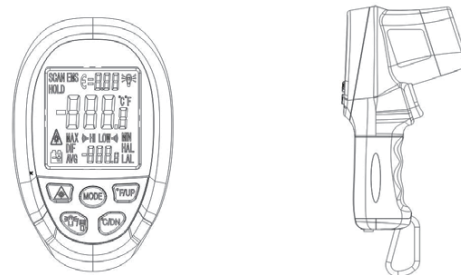

1、 Introduction

 Compact, rugged and easy to use. Just aim and push the button, read current surface temperatures in less than a second. Safely measure surface temperatures of hot, hazardous or hard-to-reach objects without contact.

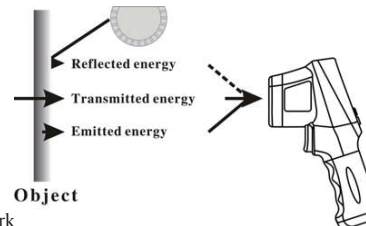

How it work

 
Infrared thermometer measures the surface temperature of an object. The unit's optics sense emitted, reflected, and transmitted energy which is collect and focused onto a detector. The unit's electronics transmitted energy which is display on the unit. For increased ease and accuracy the laser pointer makes aiming even more precise.

Cautions

Infrared thermometer should be protected for the following:

- EMF(electro-magnetic fields) from arc welders, induction heaters.
- Thermal shock(cause by large or abrupt ambient temperature changes allow 1 hours for unit to stabilize before use).


--Do not leave the unit on or near objects of high temperature.

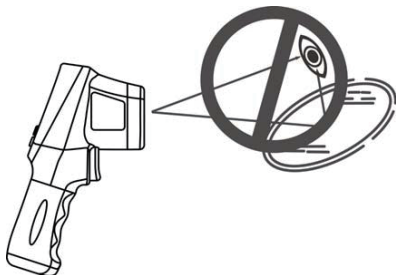

Warning

Do not point laser at eye or indirectly off reflective surfaces.

 1. When take measurement, point thermometer toward the object to be measured and hold the yellow trigger. The object under test should be large than the spot size calculated by the field of view diagram.
2. Distance & spot size: As the distance from the object increase, the spot size of measuring area becomes large.

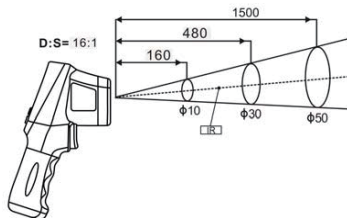

3. Field of view: Make sure the target is larger than the unit's spot size. The smaller the target the close measure distance. When accuracy is critical, make sure the target is at least twice as large as the spot size.
4. Emissivity: Most organic materials and painted or oxidized surfaces have an emissivity of 0.95. Inaccurate readings will result from measuring shiny or polished metal surfaces. To compensate, cover the surface to be measured with masking tape or flat black paint. Measure the tape or painted surface when the tape or painted

Note:

Display above code in normal Ambient temp, probable means this meter was broken.

Attached list : Applicable Emissivity for Different Material (For reference only)

Material	Emissivity	Material	Emissivity
Asphaltum	0.90 to 0.98	Textile (Black)	0.98
Beton	0.94	Human Skin	0.98
Cement	0.96	Soap bubble	0.75 to 0.80
Sand	0.90	Charcoal (powder)	0.96
Soil	0.92 to 0.96	Lacquer	0.80-0.95
Water	0.92 to 0.96	Lacquer (reluster)	0.97
Ice	0.96 to 0.98	Rubber (Black)	0.94
Snow	0.83	Plastic	0.85-0.95
Glass	0.90 to 0.95	Timber	0.90
Ceramic	0.90 to 0.94	Paper	0.70-0.94
Marble	0.94	Chromic oxide	0.81
Gypsum	0.80 to 0.90	Copper Oxide	0.78
Compo	0.89 to 0.91	Iron Oxide	0.78 to 0.82
Brick	0.93 to 0.96	Stainless steel	0.2-0.3

Above picture and content just for your reference. Please be subject to the actual products if anything different or updated. Please pardon for not informing in advance.

4.Replae the battery and put the rubber sleeve and the cover back.

3、Maintenance

- 1) Lens cleaning: Blow off lose particles using clean compressed air. Gently brush remaining debris away with a moist cotton cloth.
- 2) Case cleaning: Clean the case with a damp sponge/cloth and mild soap.
- 3) Please take out the battery when not using for a long time.

Note:



- 1) Do not use solvent to clean lens.
- 2) Do not submerge the unit in water.
- 3) Emissivity will back to the initial value (0.95) after replacing battery,. Should adjust again when use.

4、specifications

Temperature range	-50℃ to 1360℃(-58 to 2480°F)
Accuracy	3% reading+3℃, -50℃ to 0℃(-58 to 32°F) 2% reading +2℃, 0℃ above
distance spot ratio	16:1
Emissivity	0.1~1.0 adjustable
Resolution	0.1℃(0.1°F)<1000, 1℃(1°F)>1000
Repeatability	1% of reading or 1℃
Response time	<250msec, 95%response
Spectral response	8-14um
Operating temperature	0℃ to ~40℃(32 to 104°F)
Storage temperature	-20~60℃(-4~140°F) without battery
Relative humidity	Operating :10-95%RH; Storage: 10-95%RH
Ambient temp range of guarantee for accuracy	23℃~28℃
Weight/dimensions	160g; 192×95×63mm
Power	9V battery, 6F22 or NEDA 1604
Battery life	Laser models:12hrs

reach the same temperature as the material underneath.

  2、Quick start instruction

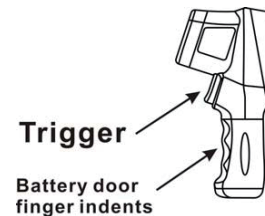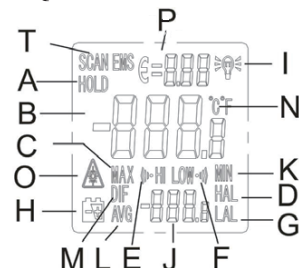


(Figure1)

1. Remove the silica gel set, remove the battery cover screw with a screwdriver, and then slide out the battery door, install battery correctly. And Put back to the battery door screws and silica gel .Pull the trigger, LCD display reading & battery icon. Release the trigger and the reading will hold for 30 seconds.


LCD display:

 - A Data Hold
- B Main display value
- C Maximum
- D High temperature alarm temperature
- E Alarm of high temperature prompt
- F Alarm of Low temperature prompt
- G Low temperature alarm temperature
- H Battery voltage Low
- I Backlight symbol
- J Additional features
- K Minimum
- L Average
- M The maximum and the minimum difference
- N Temperature of the unit
- O Laser pointer turn on prompt
- P Emissivity symbol
- T Measuring the symbol

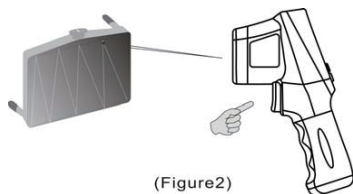

(Figure2)

 2. Locating a hot spot aim the thermometer outside the area of interest, then scan across with up and down motions until you locate the hot spot.(please turn on the laser to for accurate measuring)
3. Diagram description

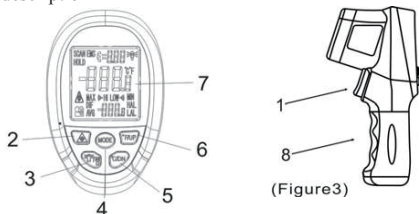

(Figure3)

 
- (1) Trigger : Press for turn on, and then display test result and hold data automatically(display HOLD) after unclamping switch. Trun off automatically after 30 seconds without operate.
 - (2) Laser pointer button : press it display “ Δ ” for turn on laser pointer, press again for turn off.
 - (3) Back light/ Lamp : When product working, press it for turn on back light, press again for turn off. press it and trigger together for turn on lamp lighted.
 - (4) MODE button: Press MODE button for cycle options - MAX - AVG - MIN - DIF - LAL - HAL mode.Long Press the button, enter into setting emissivity and setting alarm temperature.Press button for cycle options: Setting emissivity- alarm of low temperature-alarm of high temperature.Again long Press the button exit program
- A、MAX: Measure maximum data current;
 B、MIN: Measure minimum data current; ;
 C、AVG: Calculate the average of all measure data;
 D、HAL: Alarm of high temperature. Option HAL mode, press“UP/DN”button for

set alarm temperature. When LCD display ” (H)” means measure result exceeded the alarm temperature;


E、LAL: Alarm of low temperature. Option HAL mode, press“UP/DN”button for set alarm temperature. When LCD display ” LOW(H)” means measure result under the alarm temperature

- (5) °C/DN button : In “Alarm temperature” and “setting emissivity” mode for adjust value down .When product working, turn on product and press direct for °C select. please see (4).
 - (6) °F /UP button: In “Alarm temperature” and “setting emissivity” mode for adjust value up .When product working, turn on product and press direct for °F select
 - (7) LCD
 - (8) Battery door: When replace battery , please to pull open the silicon rubber case ,take off the screw ,then slide open the battery door.
- The diagram below operation:

1. Use the screwdriver to unscrew the bottom screw;

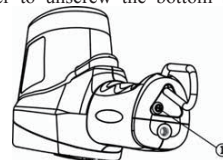

 2. Catch the hook and pull the cover of battery out from the bottom;

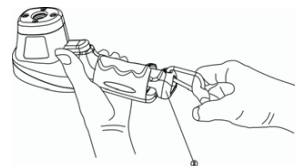

- 3.Take off the rubber sleeve.

