

IM9100

SMD TEST FIXTURE

Instruction Manual

October 2014 Revised edition 2
 Printed in Japan
 IM9100A981-02 14-10H



HIOKI

HIOKI E. E. CORPORATION

Test Equipment Depot
 99 Washington Street
 Melrose, MA 02176
 Phone 781-665-1400
 Toll Free 1-800-517-8431

Visit us at www.TestEquipmentDepot.com

Warranty

Warranty malfunctions occurring under conditions of normal use in conformity with the Instruction Manual and Product Precautionary Markings will be repaired free of charge. This warranty is valid for a period of one (1) year from the date of purchase. Please contact the distributor from which you purchased the product for further information on warranty provisions.

Introduction

Thank you for purchasing the HIOKI IM9100 SMD Test Fixture. To obtain maximum performance from the device, please read this manual first, and keep it handy for future reference.

Verifying Package Contents

When you receive the device, inspect it carefully to ensure that no damage occurred during shipping. In particular, check the accessories and connectors. If damage is evident, or if it fails to operate according to the specifications, contact your authorized Hioki distributor or reseller.

Cleaning

To clean the device, wipe it gently with a soft cloth moistened with water or mild detergent.

IMPORTANT Never use solvents such as benzene, alcohol, acetone, ether, ketones, thinners or gasoline, as they can deform and discolor the case.

Repair

If the device seems to be malfunctioning, contact your authorized Hioki distributor or reseller.

Disposal

Handle and dispose of the instrument in accordance with local regulations.

Safety Notes

Before using the instrument, be certain to carefully read the following safety notes.

CAUTION

- Mishandling during use could damage to the device. Be certain that you understand the instructions and precautions in the manual before use.
- If persons unfamiliar with electricity measuring device are to use the device, another person familiar with such instruments must supervise operations.

Notation

In this manual, the risk seriousness and the hazard levels are classified as follows.

	WARNING	Indicates a potentially hazardous situation that may result in death or serious injury to the operator.
	CAUTION	Indicates a potentially hazardous situation that may result in minor or moderate injury to the operator or damage to the device or malfunction.
	IMPORTANT	Indicates information related to the operation of the device or maintenance tasks with which the operators must be fully familiar.
		Indicates cautions and hazards. When the symbol is printed on the device, refer to a corresponding topic in the Instruction Manual.
		Indicates prohibited actions.
		Indicates the action which must be performed.

Symbols for various standards

	This symbol indicates that the product conforms to regulations set out by the EC Directive.
	WEEE marking: This symbol indicates that the electrical and electronic appliance is put on the EU market after August 13, 2005, and producers of the Member States are required to display it on the appliance under Article 11.2 of Directive 2002/96/EC (WEEE).

Usage Notes

Follow these precautions to ensure safe operation and to obtain the full benefits of the various functions

WARNING

- Installing the instrument in inappropriate locations may cause a malfunction of instrument or may give rise to an accident. Avoid the following locations.
- Exposed to direct sunlight or high temperature
- Exposed to corrosive or combustible gases
- Exposed to water, oil, chemicals, or solvents
- Exposed to high humidity or condensation
- Exposed to a strong electromagnetic field or electrostatic charge
- Exposed to high quantities of dust particles
- Near induction heating systems (such as high-frequency induction heating systems and IH cooking equipment)
- Subject to vibration

CAUTION

- To avoid damage to the device, protect it from physical shock when transporting and handling. Be especially careful to avoid physical shock from dropping.
- Do not slant the device or place it on top of an uneven surface. Dropping or knocking down the device can cause injury or damage to the device.
- When using the IM9100 with the 9268-10 DC Bias Voltage Unit, to prevent damage to the IM9100 and the connected measuring instrument, do not short the contact probes of the test head while a DC voltage (DC bias) is being input.

IMPORTANT

- The template which fixes a sample becomes dirt and there is a possibility that a function may fall by deformation etc. When dirt adheres, please remove with soft brush, cloth, etc.
- The template, short correction jig, and open correction jig are expendable items. If there are signs of deterioration due to deformation of or other damage, contact your dealer or Hioki representative to order a new one.

Precautions during shipment

Use the original packing materials when transporting the device, if possible. Pack the device so that it will not sustain damage during shipping, and include a description of existing damage. We do not take any responsibility for damage incurred during shipping.

Overview

The IM9100 SMD Test Fixture is a test fixture for SMD components that connects directly to the measurement terminal (UNKNOWN terminal) on a HIOKI LCR meter. It allows you to perform 4-terminal measurement of three types of compact chip component (0.4 mm × 0.2 mm, 0.6 mm × 0.3 mm, and 1.0 mm × 0.5 mm).


Specifications

Operating environment	Indoors, altitude up to 2,000 m (6,562-ft.)
Operating temperature and humidity	0°C to 40°C/ 32°F to 104°F, 80%RH or less (non-condensating)
Storage temperature and humidity	-10°C to 55°C/ 14°F to 131°F, 80%RH or less (non-condensating)
Dimensions	Approx. 94W×62H×99D mm / 3.7"W×2.44"H×3.9"D (Outer dimensions with pusher on the far left. Excluding protruding parts such as the pusher up/down operation knob, BNC connectors, adjustor, and rubber legs.)
Mass	Approx. 300 g/ 10.6 oz.
Product warranty period	1 year
Connection to measuring instrument	4-terminal pair design Connectors: BNC (connector spacing: 22 mm/ 0.87")
Contact with sample	4-terminal design
Measurement sample size	JIS (EIA): L×W mm 0402 (01005): 0.4×0.2 mm 0603 (0201): 0.6×0.3 mm 1005 (0402): 1.0×0.5 mm
Maximum input voltage	±42 V peak (AC+DC)
Maximum input current	0.15 A rms (±0.15 ADC)
Usable frequency range	DC to 8 MHz
Residual parameter values (reference values)	Capacitance: 1.5 pF or less Inductance: 100 nH or less Resistance: 50 mΩ or less
Accessories	• Instruction Manual ×1 • Short correction jig ×1 (used for all component sizes) • Open correction jig ×2 (1005 size: The 1005 size is used for all sizes.) Residual parameter values (reference values) : Less than 50 fF

Connection Method

Inspection Before Use


Before using the device, verify that it operates normally to ensure that no damage occurred during storage or shipping. If you find any damage, contact your authorized Hioki distributor or reseller.

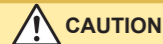


- When disconnecting the BNC connector, be sure to release the lock before pulling off the connector. Forcibly pulling the connector without releasing the lock, can damage the BNC connector.

You will need: Phillips-head screwdriver

- Align the device's BNC connectors with the instrument's BNC connectors, insert them, and lock the device in place with the lock lever.

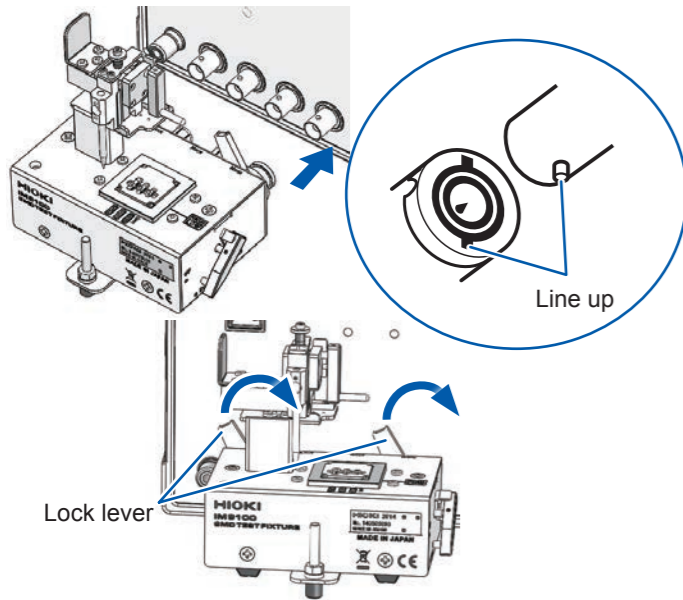


- Adjust the adjuster so that the connector is not subject to excessive force.

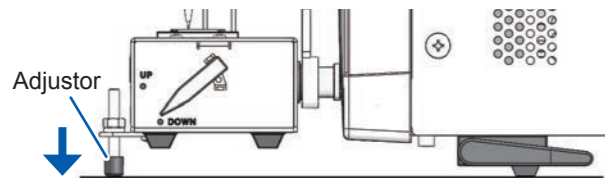


- If you need to fine-tune the sample and push tip position, loosen the pusher fixing screws and adjust as necessary.

Retighten the fixing screws after adjustment

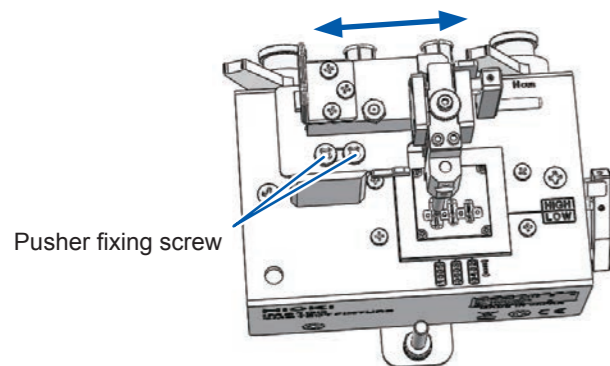

Parts Names

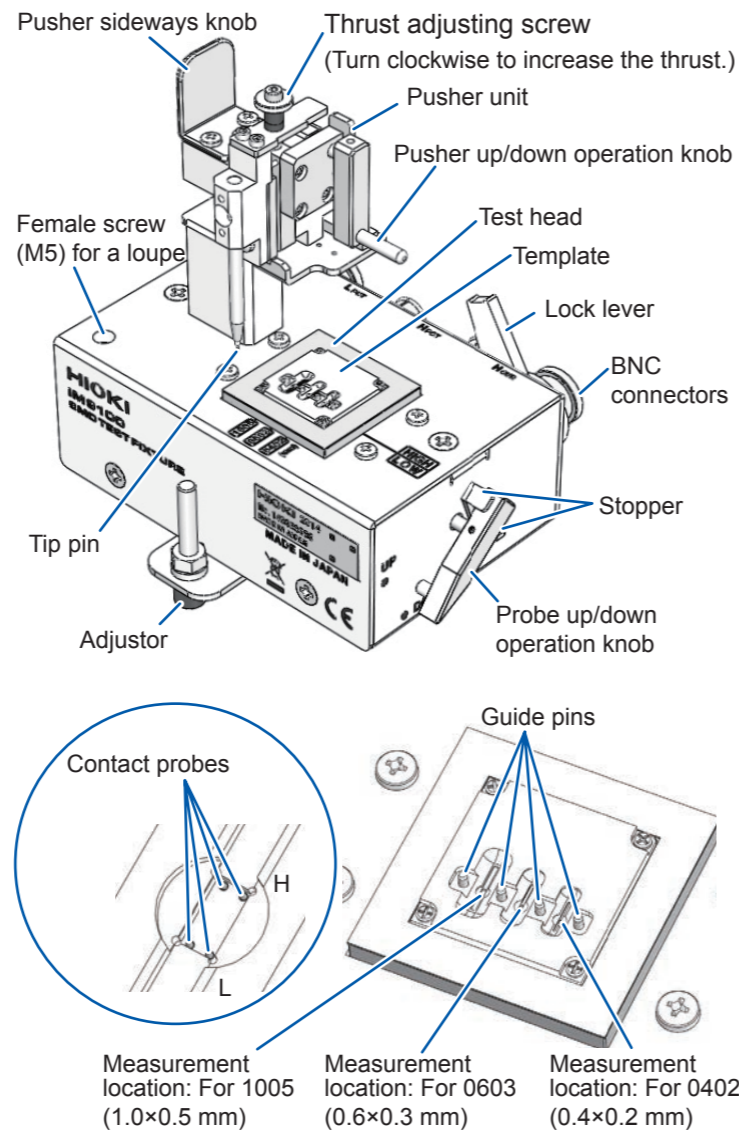


Open Correction

To reduce measurement error, open correction is performed. The correction method varies with the instrument to which the device is to be connected. See the user manual that came with the instrument.

You will need: Open correction jig, tweezers

- Using the pair of tweezers, attach the open correction jig to the 1005 measurement position on the test head.

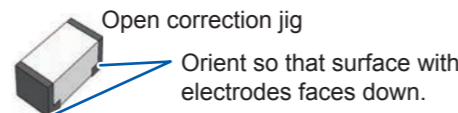

- Gradually apply the tip pin to the open correction jig.
- Perform correction with the instrument. For more information, see "Measurement Method" in the user manual.

IMPORTANT Even if you will be measuring 0402- and 0603-size samples, perform open correction using the 1005 measurement position.

Short Correction

To reduce measurement error, short correction is performed. The correction method varies with the instrument to which the device is to be connected. See the user manual that came with the instrument.




- To prevent damage to contact probes, lower the contact probe with the probe up/down operation knob when attaching or removing the template.
- When attaching the template, insert it so that the fixing screws pass straight through the screw hole and tighten it in place using an appropriate amount of force. Over-tightening may damage the screw holes.
- Screw tightening torque: Max. 0.015 N·m

You will need: No. 0 precision Phillips-head screwdriver, short correction jig


Removing the template

- Remove the screws holding the template in place.
- Lift off the template to remove it.

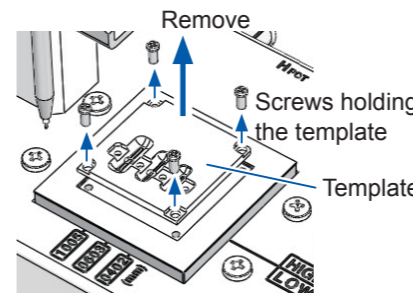

Attaching the short correction jig and performing correction

- Pass the guide pins through the holes in the short correction jig and attach it at the position corresponding to the size of sample to be measured.

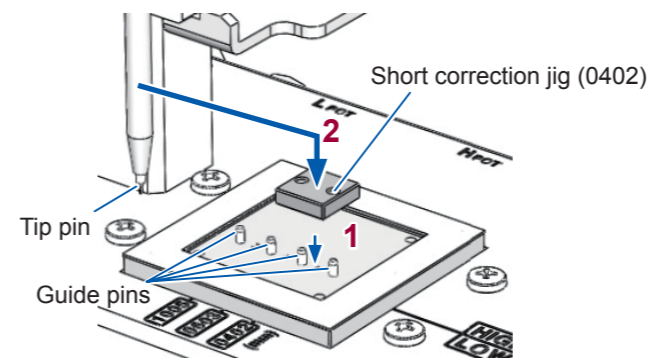


- Move the pusher unit to the short correction jig's position.
- Turn the pusher up/down operation knob in the "down" direction to gradually lower the tip pin until it comes into contact with the short jig.
- Turn the probe up/down operation knob in the "up" direction to raise the contact probe.
- Perform correction with the instrument.

Attaching the template

After performing short correction, reattach the template as it was attached before.

Measurement Method

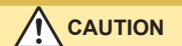

- To prevent damage to the device and samples, lower the contact probe with the probe up/down operation knob when attaching samples. Additionally, apply the tip pin to samples gradually so as not to subject them to excessive force.
- Do not apply the tip pin to the contact probe without first attaching a sample
- To avoid damaging the tip pin, do not move the pusher unit horizontally while the pusher is in the lowered position.

You will need: Tweezers

Preparing for Measurement

- Turn the pusher up/down operation knob in the "up" direction to raise the tip pin.
- Using the pusher sideways knob, move the pusher unit in the direction of the arrow.
- Lower the probe up/down operation knob to lower the contact probe. (This step can also be performed before Step 1 above.)

Attaching the sample

- Place the sample on the template using a pair of tweezers. Align the sample's electrodes with the H and L contacts on the template and be sure that it is placed right side up, etc.
- Move the sample to the guide groove.
- Place the sample in the measurement location's square hole.

IMPORTANT To ensure accurate measurement, remove samples from other measurement locations before performing measurement.

Securing and measuring the sample

- Using the pusher sideways knob, move the pusher unit to the location of the sample.
- Turn the pusher up/down operation knob to gradually lower the tip pin until it comes into contact with the sample.
- Raise the probe up/down operation knob to raise the contact probe.
- Perform measurement with the instrument.

Completing measurement

After measurement is complete, remove the sample by reversing the steps used to secure it in place. Raise the pusher up/down operation knob until it comes into contact with the stopper before moving the pusher unit horizontally.