




Model: AR862A +

Non-contact infrared thermometer Instruction manual



1. Introduction

Compact, rugged and easy to use. Just aim and push the button, read current surface temperatures second. Safely measure the surface temperatures of hot, hazardous or hard to reach objects without contact.

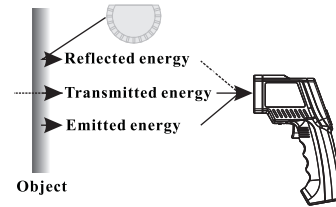

2. How it works

Infrared thermometer measures the surface temperature of an object. The unit's optics sense emitted, reflected, and transmitted energy which is collected and focused onto a detector. The unit's electronics translate the information into a temperature reading which is displayed on the unit. For increased ease and accuracy the laser pointer makes aiming even more precise.


3. Cautions

- Infrared thermometer should be protected for the following:
- EMF (electro-magnetic fields) from arc welders, induction heaters.
 - Thermal shock (cause by large or abrupt ambient temperature changes allow 30 minutes for unit to stabilize before use).
 - Do not leave the unit on or near objects of high temperature.

4. Warning


Do not point laser directly at eye or indirectly off reflective surfaces.

- 4.1. When take measurement, point thermometer toward the object to be measured and hold the yellow trigger. The object under

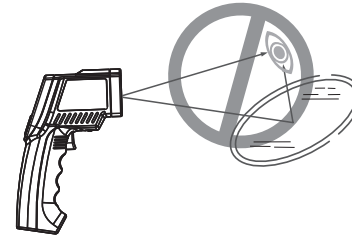

test should be larger than the spot size calculated by the field of view diagram.


- 4.2 Distance & spot size: As the distance from the object increase, the spot size of measuring area becomes larger.

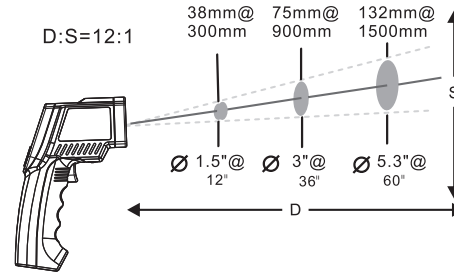

- 4.3. Field of view: Make sure the target is larger than the unit's spot size. The smaller the target the closer measure distance. When accuracy is critical, make sure the target is at least twice as large as the spot size.
- 4.4. Emissivity: Most organic materials and painted or oxidized surfaces have an emissivity of 0.95 (pre-set in the unit). Inaccurate readings will result from measuring shiny or polished metal surfaces. To compensate, cover the surface to be measured with masking tape or flat black paint. Measure the tape or painted surface when the tape or painted reach the same temperature as the material underneath.

Material	Emissivity	Material	Emissivity
Aluminum	0.30	Iron	0.70
Asbestos	0.95	Lead	0.50
Asphalt	0.95	Limestone	0.98
Basalt	0.70	Oil	0.94
Brass	0.50	Paint	0.93
Brick	0.90	Paper	0.95
Carbon	0.85	Plastic	0.95
Ceramic	0.95	Rubber	0.95
Concrete	0.95	Sand	0.90
Copper	0.95	Skin	0.98
Dirt	0.94	Snow	0.90
Frozen food	0.90	Steel	0.80
Hot food	0.93	Textiles	0.94
Glass(plate)	0.85	Water	0.93
Ice	0.98	Wood	0.94


5. Quick start instruction

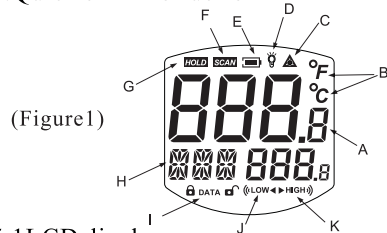

(Figure 1)

5.1 LCD display:

- A measuring reading
- B measuring unit
- C laser on icon
- D back light on icon
- E battery power icon
- F scanning icon
- G data hold icon
- H mode indicator
- I data storage / read icon
- J low temperature alarm icon
- K high temperature alarm icon

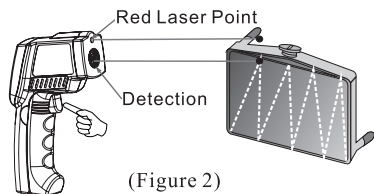

(Figure 2)


5.2 Locating a hot spot: To find a hot spot aim the thermometer outside the area of interest, then scan across with up and down (please turn on motions unitl you locate the hot spot.the laserto for accurate measuring)

5.3 Diagram description


(1) Trigger: When turn on LCD display VER XX software version for 1 sec. And turn to di-splay reading with SCAN icon. Release the trigger, display reading with HOLD

icon. Built in auto power off in 30sec.

(2) Laser / back light button: when back light turn on , any operations will remain back light for 7 sec. LCD indicate on/off status.

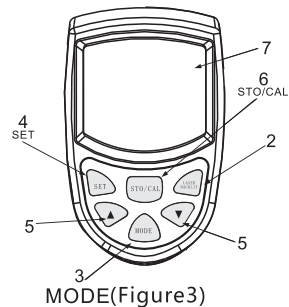

MODE(Figure3)

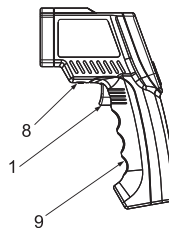

(Figure4)

(3)—(6) key functions: press 3 key, LCD subdisplay blinks MAX-MIN-DIF-AVG-HAL-LAL-STO segment(only main display means normal measuring mode) press 4 key to enter.

- a. MAX: measuring maximum temperature
- b. MIN: measuring minimum temperature
- c. DIF: Basic on the reading before press 4 key, compute the difference of current reading.
- d. AVG: measuring average temperature
- e. HAL: high temperature alarm--when selected HAL, press 5 keys to set high temperature alarm trigger and confirmed by pressing 4 key. When reading over trigger, LCD display HI icon with BiBi audio sounds.

F. LAL: low temperature alarm--when

selected LAL, press 5 keys to set low temperature alarm trigger and confirmed by pressing 4 key. When reading over trigger, LCD display LOW icon with BiBi audio sounds

g. STO: data storage--when selected STO, lock & DATA & 1---indicator will shown when press 4 key. After temperature read out press 6 key to store, then 2---memory unit will be shown. There 12 groups memory unit available. To recall the stored data in normal measuring mode by pressing 6 key (back to normal status by pressing 3key) remove all data by pressing 6 key for 2 seconds.

- (1) Measurement trigger.
- (2) LASER/BACKLIGHT: Laser point and backlight switch.
- (3) MODE: Mode switching key .
- (4) SET: Set ensuring key.
- (5) ▲ / ▼ : Parameter selecting key.
- (6) STO/CAL: Data store / clear key.
- (7) LCD display(see figure 1).
- (8) Battery door knob.
- (9) Battery door.

6. Maintenance

- 6.1 Lens cleaning: Blow off lose particles using clean compressed air. Gently brush remaining debris away with a moist cotton cloth.
- 6.2 Case cleaning: Clean the case with a damp sponge/cloth and mild soap.

7. Note:

- 7.1 Do not use solvent to clean lens.
- 7.2 Do not submerge the unit in water.

Specifications	
Temperature range	-50 to 900°C (-58°F to 1652°F)
Accuracy	-50°C(-58°F) to -32°C(-25.6°F)±5°C -32°C(-25.6°F) to 0°C(32°F) ±3°C 0°C(32°F) to 100°C(212°F) ±2°C whichever is greater 100°C hereinbefore ±2°C or±2% whichever is greater
Repeatability	1% of reading or 1°C
Response time	500 mSec, 95% response
Spectral response	8-14 um
Emissivity	0.10 to 1.00 adjustable (pre-set 0.95)
Ambient operating range	0 to 40°C (32 to 104°F)
Relative humidity	10-90% RH noncondensing
Storage temperature	-20 to 60°C (-4~140°F) ≤85%RH, without battery
Weight/Dimensions	170g ;175*100*49mm
Power	9V Alkaline or NiCd battery
Battery life (Alkaline)	Laser Models:12 hrs
Distance to Spot Size	12:1

